

CS550 TREADMILL Owner's Manual







Frank Trulaske, founder and CEO of TRUE®, has had the same simple philosophy of delivering superior products, service and support for over 29 years. Today, TRUE is the global leader in premium cardio equipment for the commercial and residential markets. Our goal is to be the leader in technology, innovation, performance, safety and style. TRUE has received many awards for its commercial and retail product over the years and remains the benchmark for the industry. Fitness facilities and consumers invest in TRUE products for their durable commercial platforms used in all cardio products, commercial, light commercial and residential alike.

The proud manufacturing traditions of quality and the culture of innovation at TRUE has given rise to a full line of truly extraordinary treadmills, indoor cycles and elliptical crosstrainers. As a result, people all over the world are benefiting from the TRUE experience. Innovation across the full product line has made TRUE successful and is a trademark of the TRUE heritage. TRUE's patented Heart Rate Control® technology is just one of the remarkable ways we deliver simple and superior performance every user can enjoy, and most importantly, use to achieve personal health and fitness goals.

TRUE strives to perfect biomechanically correct and orthopedically comfortable, functional products. Whether it be the mesh seat in the recumbent bike, the Soft Step® in the elliptical cross-trainers or the Soft System® in our treadmills, we deliver the best.

At the heart of our success is the relentless and systematic life testing of both our products and their components. We have dedicated employees who understand our philosophy to deliver the best products in the world.

Our goal is not to sell the most cardio products in the world, but to deliver the world's best premium equipment for our customers' health and fitness solutions.

To own a TRUE machine is to be part of an exclusive fitness community that delivers results – your results.

Thank you for becoming a part of the TRUE experience.



TABLE OF CONTENTS

Chapter 1: Safety Instructions4	ŀ
Chapter 2: Treadmill Overview9	
Chapter 3: Display Console1 A. 15"Touchscreen B. 11" Custom LCD	C
Chapter 4: Programming & Operation1 A. 15"Touchscreen B. 11" Custom LCD	6
Chapter 5: Care & Maintenance2	1
Chapter 6: Troubleshooting2	:3
Chapter 7: Additional Information2	25

IMPORTANT:

Product specifications, features & software are subject to change without notice.





Chapter 1: Safety Instructions

Chapter 2: Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting



IMPORTANT SAFETY INSTRUCTIONS

CAUTION: Health related injuries may result from incorrect or excessive use of exercise equipment.

TRUE STRONGLY recommends seeing a physician for a complete medical exam before undertaking an exercise program, particularly if the user has a family history of high blood pressure or heart disease, is over the age of 45, smokes, has high cholesterol, is obese or has not exercised regularly in the past year. TRUE also recommends consulting a fitness professional on the correct use of this product. If at any time while exercising the user experiences faintness, dizziness, pain or shortness of breath, he or she must stop immediately.

This CS550 Full Commercial treadmill is intended for commercial use.

WARNING: READ ALL INSTRUCTIONS BEFORE USING THE TREADMILL.

WARNING: Do not move the treadmill by lifting the console. Do not use the console as a handlebar during a workout.

WARNING: To reduce the risk of electrical shock, always unplug this TRUE product before cleaning or attempting any maintenance activity.

DANGER: To reduce the risk of electric shock, always unplug the treadmill before cleaning.

WARNING: To reduce the risk of burns, fire and electric shock or injury to persons, follow these instructions:

- Attach the safety clip to your clothing before each workout and while the treadmill is in use.
- Avoid exiting treadmill while leaving the tread belt in motion.
- Never walk or jog backwards on the treadmill.
- This equipment should never be left unattended when plugged in.
- To avoid injury stand on the straddle covers before starting the treadmill.
- Do not exceed maximum user weight as outlined in the product specification section of this manual.
- Wear shoes with rubber or high traction soles. Do not use shoes with heels, leather soles, cleats or spikes. Make sure no stones are embedded in the soles. Do not use this product in bare feet. Keep all loose clothing, shoelaces and towels away from moving parts.
- Do not operate the treadmill while being covered with a blanket, plastic, or anything that insulates or stops airflow.
- Close supervision is necessary if the treadmill is used by children or near children. Also applies to disabled persons.
- Use this treadmill only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.



- Never operate this treadmill if it has a damaged power cord or plug, if it is not working properly, if it has been damaged or dropped, or if it has been submerged in water. In these cases, a qualified service technician should examine this treadmill.
- Do not use the power cord as a handle for transporting.
- Do not run the power cord along the side or under the treadmill.
- Keep the power cord away from heated surfaces.
- Position this product so the power cord plug is accessible to the user.
- Never operate the equipment with the air vents blocked. Keep air vents free from clogs.
- Never drop or insert any object into any opening.
- Do not reach into or underneath the unit, or tip it on its side during operation.
- Use the side handrails whenever additional stability is required. In case of emergency, such as tripping, the side handrails should be grabbed and the user should place his/her feet on the straddle covers. The front handlebars should be used to grasp the heart rate sensors or to rest the hand on while operating the activity zone keys, but not for stability, emergency, or continuous use.
- Use indoors only.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect power cord, first turn power switch to the off position, then remove plug from outlet.
- Allow only trained personnel to service this equipment.
- Never use near water or while wet. Using this treadmill around a pool, hot tub or sauna will void the warranty.
- Avoid the possibility of bystanders being struck or caught between moving parts by making sure that they are out of reach of the treadmill while it is in operation.
- Allow only one person at a time on the treadmill while it's operating.
- Ensure that the back of the treadmill is placed at least 39" away from a wall or other obstructions.
- Ensure that the sides of the treadmill are placed at least 20" away from a wall or other obstructions.
- Never place liquids of any type directly on the unit except in the accessory tray or bottle holders. Containers with lids are recommended.
- Do not allow animals on or near the treadmill while it's operating.
- Consult your physician before beginning any exercise program.
- Do not use if you have a cold or fever.



GROUNDING INSTRUCTIONS

WARNING: To reduce the risk of burns, fire, electric shock or injury, it is imperative to connect each product to a properly grounded electrical outlet. A risk of electrical shock may result from improper connection of the equipment's grounding conductor. Check with a qualified electrician if you are unsure about proper grounding techniques. Do not modify the plug provided with this product. If it will not fit an electrical outlet, have a proper outlet installed by a qualified electrician. Your TRUE Fitness product must be properly grounded to reduce risk of shock if the treadmill malfunctions. Your treadmill is equipped with an electrical cord, which includes an equipment grounding conductor and a grounding plug. The plug must be inserted into an outlet that has been properly installed and grounded in accordance with all local codes and ordinances. A temporary adapter cannot be used to connect this plug to a two-pole receptacle in North America. If a properly grounded 120 Volt/20 Amp outlet is not available, a qualified electrician must install one.



POWER REQUIREMENTS FOR TRUE PRODUCTS

NOTE: Read and understand all instructions on this sheet and in the Owner's manual before plugging any TRUE power cord into an electrical outlet. This information sheet will help you identify the voltage and cords you need where you live and will outline requirements for:

- · Grounded, dedicated lines
- Voltage
- · Power cords
- · Power adapters
- · Extension cords

!DANGER: Improper connection of the equipmentgrounding conductor can result in risk of electric shock. Check with a qualified electrician or service provider if you are in doubt as to whether the equipment is properly grounded or installed on a dedicated line. Seek a qualified electrician to perform any modifications to the cord or plug. TRUE is not responsible for injuries or damages as a result of cord or plug modification.

!CAUTION: Place cords away from heat (such as baseboards). Use care to arrange any cord so it doesn't become an obstacle.

Extension Cords

Do not use an extension cord to supply power to any TRUE product.

Grounded, Dedicated Line

TRUE equipment must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. TRUE cords (except for cycle adapters) have an equipmentgrounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances where you live. Do not use a ground plug adapter to adapt the power cord to a non-grounded outlet. Do not use a GFCI outlet or GFCI circuit breaker. A dedicated line will assure that adequate power is available for safe operation over the life of your TRUE Product.

Voltage

Voltage required for your unit is located on the serial number decal (usually on the front of the unit). Depending on where you live voltage requirements differ.

For example, in the United States some TRUE treadmills require a circuit rated 115 VAC, 60 Hz and 20 amps. See Figure 1. However, a home typically has 15 amp outlets. In this case, contact an electrician to install a 20 amp dedicated line prior to use. See Figure 2.




Figure 1

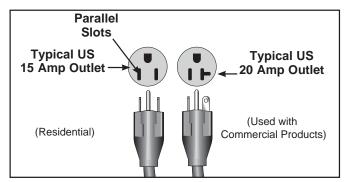


Figure 2

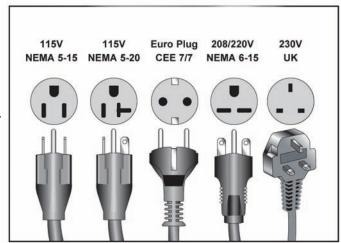


Figure 3



CHAPTER 2: TREADMILL OVERVIEW



Chapter 2: Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting







Chapter 1: Safety Instructions

Chapter 2: Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting



DISPLAY CONSOLE OPTIONS

This TRUE Fitness commercial treadmill has several console options. Depending on the console that came with this treadmill, the workouts, programming and operation of the treadmill may differ. The console options available on this machine are:

Integrated 15" LCD with Touch Screen technology that has a built-in TV, integrated iPod® connectivity with music and video featuring onscreen navigation, Scenic Landscape Perspectives, USB connectivity, NTSC/ATSC/OAM digital tuner or PAL/SECAM tuner

11" Custom LCD with optional integrated wireless entertainment control, integrated iPod® connector

Please refer to the information in this manual for basic operation information. For more detailed information please visit www.truefitness.com.




15" LCD with Touchscreen








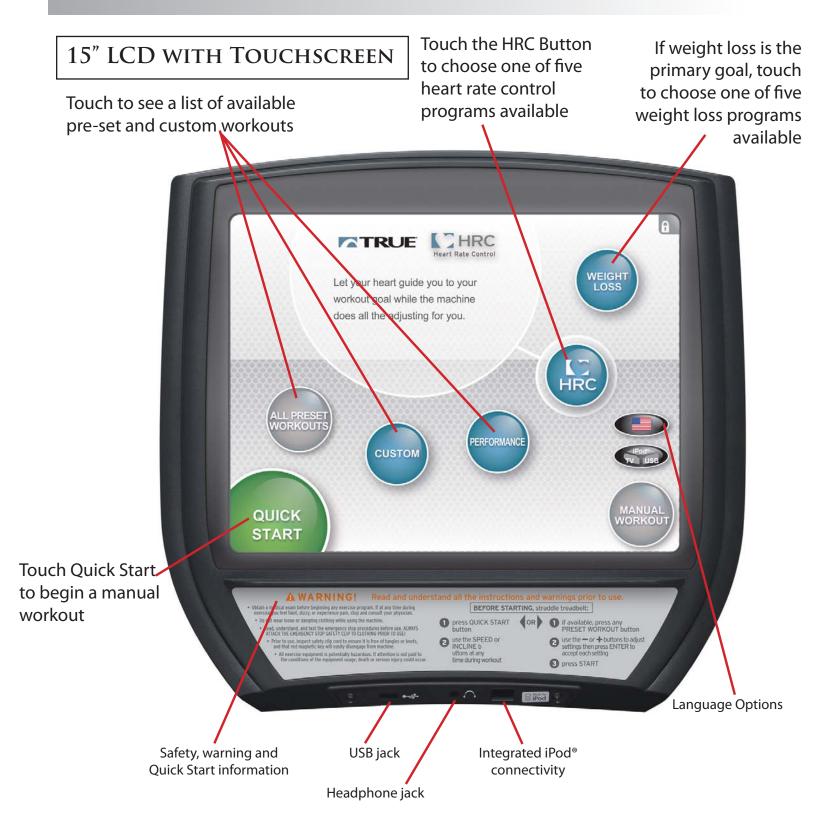



15" TOUCHSCREEN SAMPLE SCREENS- DATA DISPLAYS

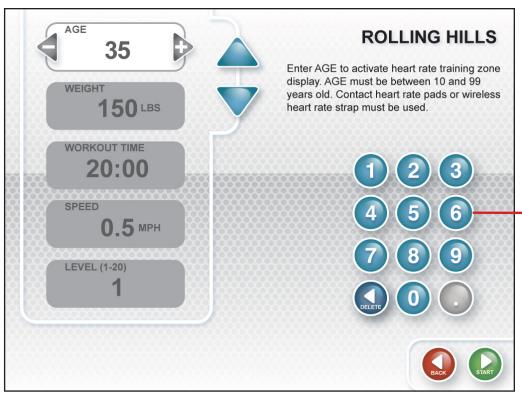

DATA ENTRY

After selecting a program the data entry screen will guide a user to enter workout parameters.

Use keypad to enter personal data such as age and weight



DATA DISPLAY

This is one example of a data display. Applicable data related to the current workout will be displayed. There are several options for data display available.

Use arrows to adjust speed

Media Volume Control Buttons

truefitness.com / 800.425.6570 / 1.636.272.7100

fan controls

Use arrows to adjust incline



15" TOUCHSCREEN SAMPLE SCREEN



MEDIA DISPLAY

This is one example of a media display, specifically the iPod® interface. There are additional media display screens for video and other media.

control your iPod® from the touchscreen

volume controls



This is one example of the television interface display.

Control and monitor your workout while viewing the television


volume controls



11" CUSTOM LCD





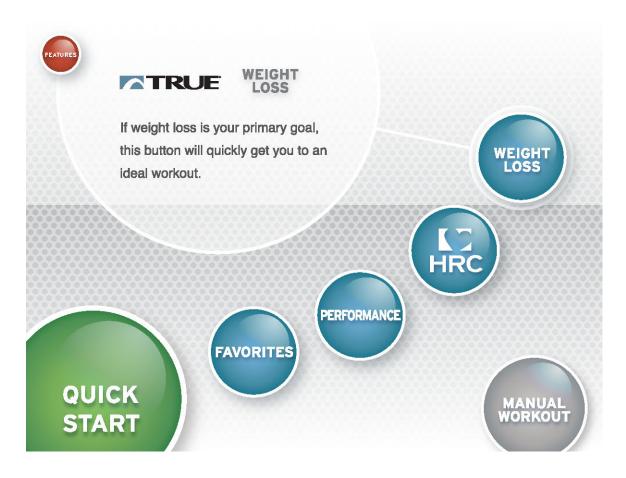

Chapter 1: Safety Instructions

Chapter 2: Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting



Programming & Operation 15" Touchscreen:

Here is a list of programming options available on your CS550 treadmill with 15" Touchscreen. Programming and operation may differ depending on the type of console. For more information on programming and operation please visit www.truefitness.com.

Quick Start: Begin a manual workout by pressing START. (A manual workout is a workout where all aspects of the workout (workout time, distance, speed and incline) are decided by the user.

Weight Loss: If weight loss is your primary goal, these programs will get you to an ideal workout.

- <u>Calorie Goal:</u> This workout allows you to choose the number of calories you wish to burn within a specified workout time.
- Weight Loss Hills: Hill workout divided in work and rest segments with a max speed of 4 mph.
- Rolling Hills: A series of gradual increasing and decreasing incline changes that simulate rolling hills.
- Walk & Run Intervals: Segments in this workout are divided in walk and run segments.
- <u>HRC Weight Loss:</u> Based on age, this is a heart rate controlled workout at 65% of your maximum heart rate.

HRC: Heart Rate Control monitors your heart rate and automatically adjusts speed and incline to keep it within a preselected range.

- <u>Target HRC:</u> The treadmill takes control of speed and incline to maintain the users target Heart Rate.
- <u>HRC Weight Loss:</u> Based on age, this is a heart rate controlled workout at 65% of your maximum heart rate.
- <u>Aerobic HRC:</u> Based on age, this is a heart rate controlled workout at 80% of your maximum heart rate.
- <u>Distance HRC</u>: 4 fixed-distance HR workouts put the treadmill in control of the user's speed and incline to maintain the users target Heart Rate.



• <u>Interval HRC</u>: User determines WORK heart rate and treadmill reduces REST portion of each interval to 65% of speed and incline

Performance: These programs are designed to get the most out of users that workout on a regular basis.

- <u>Cardio Challenge</u>: Speed and incline increase to a set maximum at the mid-point of the workout, then decrease to the finish.
- Speed Workouts: Speed Intervals: Speed intervals are divided in work and rest segments.
- <u>Speed Ramp:</u> Speed increases to the entered maximum speed at the mid-point of the workout, then decreases to the finish.
- Incline Workouts: Incline Intervals: Incline intervals are divided in work and rest segments.
- One Big Hill: Incline increases to a maximum at the mid-point of the workout, then decreases to the finish.
- <u>Distance Workouts:</u> Pre-determined distance workout. This workout will only run the selected workout distance of 5K, 10K, 2mi or 4mi.

Fitness Tests:

- <u>Gerkin Fitness Test:</u> A fitness test used to estimate your VO2 max. This test increases speed and incline gradually every minute and ends at the point where your heart rate reaches 85% of the maximum for your age.
- <u>Army Fitness Test:</u> This is a 2-Mile running test measured against age and gender calculations.
- Navy Fitness Test: This is a 1.5 mile running test measured against age and gender.
- <u>Air Force Test:</u> This is a 1.5 mile running test measured against age and gender.
- Marines Test: This is a 3-Mile running test measured against calculations for male and female.



PROGRAMMING & OPERATION: 11" CUSTOM LCD:

Here are a list of programming options available on your CS550 treadmill with 11" Custom LCD. Programming and operation may differ depending on the type of console. For more information please visit www.truefitness.com.

Program Category:

Quick Start: Begin a manual workout by pressing START. (A manual workout is a workout where all aspects of the workout (workout time, distance, speed and incline) are decided by the user.

Pre-set Workouts

- Calorie Burn: A walking workout where max speed is 4 mph.
- <u>Hill Intervals:</u> Walking intervals with grade alternate between hills and nearly flat in two-minute segments.
- Speed Intervals: Zero-grade walking or running intervals are in one-minute segments.
- <u>Speed Ramp Up:</u> Zero-grade gradually increases speed then decreases speed, changing once per minute.
- <u>Glute Buster:</u> A steady pace with a ramp up in incline to the middle of the workout, then a gradual decline until the end of the workout.
- <u>Leg Shaper:</u> Similiar to Glute Buster, but with varying incline changes throughout the workout.
- <u>Cardio Challenge</u>: Similiar to Speed Ramp Up, except both speed and incline change throughout the workout.
- <u>Sports Training</u>: Similiar to Speed Intervals, but with varying speed changes throughout the workout.

HRC (Heart Rate Control) Workouts

- <u>Time-based constant HRC:</u> pick a target heart rate and exercise for an amount of time you select.
- <u>Cruise Control:</u> while in any workout, set your current heart rate as your target heart rate by pressing a single key.



• <u>Interval HRC</u>: User determines WORK heart rate and treadmill reduces REST portion of each interval to 65% of speed and incline

Fitness Tests:

- Army Fitness Test: This is a 2-Mile running test measured against age and gender calculations.
- Navy Fitness Test: This is a 1.5 mile running test measured against age and gender.
- Air Force Test: This is a 1.5 mile running test measured against age and gender.
- Marines Test: This is a 3-Mile running test measured against calculations for male and female.



CHAPTER 5: CARE & MAINTENANCE



Chapter 1: Safety Instructions

Chapter 2: Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting



CHAPTER 5: CARE & MAINTENANCE

CARE & MAINTENANCE

It is important to perform the minor maintenance tasks described in this section. Failure to maintain the treadmill as described here could void the TRUE Fitness Warranty. To reduce the risk of electrical shock, always unplug the unit from its power source before cleaning or performing any maintenance tasks.

INSPECTION:

Inspect the treadmill daily. Look and listen for loose fasteners, unusual noises, worn or frayed power cords, and any other indications that the equipment may be in need of service. If you notice any of these, obtain service.

IMPORTANT: If you determine that the treadmill needs service, make sure that the treadmill cannot be used inadvertently. Turn the unit Off, and then unplug the power cord from its power source. Make sure other users know that the treadmill needs service.

CLEANING THE EQUIPMENT:

TRUE recommends the treadmill be cleaned before and after each workout. Use mild soap and water to dampen a soft cloth and wipe all exposed surfaces. This helps remove any dust or dirt.

Clean the display console regularly with mild soap and water or a mild household cleaner. DO NOT use paper towels, ammonia or acid based cleaners. *

CAUTION: Do not use any acidic cleaners. Doing so will weaken the paint or powder coatings and may void the TRUE Fitness Warranty. Never pour water or spray liquids on any part of the treadmill. Allow the treadmill to dry completely before using. Frequently vacuum the floor underneath the unit to prevent the accumulation of dust and dirt, which can affect the smooth operation of the unit.

*When cleaning the exterior of the unit, a non-abrasive cleaner and soft cotton cloth are strongly recommended. At no time should cleaner be applied directly to any part of the equipment; use non-abrasive cleaner of soft cloth and then wipe the unit.

STORING THE CHEST STRAP:

Store the chest strap in a place where it remains free of dust and dirt such as, in a closet or drawer. Be sure to protect the chest strap from extremes in temperature. Do not store it in a place that may be exposed to temperatures below 32° F (0° C). To clean the chest strap, use a sponge or soft cloth dampened in mild soap and water. Dry the surface thoroughly with a clean towel.

LONG-TERM STORAGE:

When the treadmill is not in use for any length of time, turn it off. Make sure that the power cord is unplugged from the power source and is positioned so that it will not become damaged or interfere with people or other equipment.



CHAPTER 6: TROUBLESHOOTING



Chapter 1: Safety Instructions

Chapter 2:Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting



CHAPTER 6: TROUBLESHOOTING

BASIC TREADMILL TROUBLESHOOTING GUIDE

The following are common questions that are asked. For all other inquiries we would ask that you call your local dealer/service provider in your area for support.

Q. What does it mean when my panel displays no lights?

A. Check the following:

- Verify you are receiving power to your outlet by using an alternative device.
- It could mean that your unit is not plugged in.
- You will need to check the toggle switch on the front base of the unit to make sure it is in the ON position.
- You can check to see if your circuit breaker switch on your unit has been tripped. If so, you can reset it and the lights should reappear on your display. If it will not reset, you will need to call your local dealer or service provider to set up a service call.

Q. The display shows an error code or has odd characters.

A. If your display has any error messages on it TRUE Fitness recommends that you contact your local dealer or service provider to arrange a service call. The error codes are there for your protection and we do not recommend that you continue using the unit without consulting a professional.

Q. Is there any maintenance that I need to do to my treadmill?

A. TRUE Fitness encourages our customers to set themselves up with a preventative maintenance contract. These can be provided through your dealer or local service provider.

Q. How do I arrange for a service or preventative maintenance appointment?

A. TRUE Fitness recommends that you gather both serial numbers (from console and base), model number, and a brief description of the reason for the request before contacting anyone. Once that information has been gathered you may contact your selling dealer or local service company to set an appointment. (If you are not familiar with who is in your area, you may visit our website at www.truefitness.com and use our dealer locator to obtain the contact information for the closest dealer in your area.)

You may also contact TRUE Fitness' customer support team by calling 800.883.8783 or e-mailing us at info@ truefitness.com Monday – Friday during normal business hours with any further questions or comments.





Chapter 1: Safety Instructions

Chapter 2: Treadmill Overview

Chapter 3: Display Console

Chapter 4: Programming & Operation

Chapter 5: Care & Maintenance

Chapter 6: Troubleshooting



Save Time and Register Online! Activate Multiple Warranties at www.truefitness.com/support

All TRUE® Fitness products are distributed by TRUE and are warranted to the original registered product purchaser and the parts of the TRUE product (the "Product") listed below, under normal use and service, shall be free of manufacturing defects in workmanship and materials only for the period of time beginning from the original date of purchase set forth below:

Frame*	Lifetime
Motor	
Drive Motor	5 Years
Motor Controller	5 Years
<u>Parts</u>	
15"Touchscreen	3 Years
Electrical	3 Years
Wear Items	3 Years
Cosmetics	6 Months
Labor	
Parts	3 Years
Motor	3 Years
Cosmetics	6 Months
iPod® Connectivity	
Headphone Jack,	90 Days Parts,
Connector & USB Port	No Labor

NOTE: Warranty valid for USA and Canada only.

NOTE: Failure to register this product will result in no servicing or authorization of parts to be shipped.

NOTE: Buying after-market products from a 3rd party will result in voided warranty.

NOTE: This product is intended for Full Commercial use which includes facilities where usage is in excess of 8 hours per day. This includes all dues-paying facilities (regardless of usage) as well as many non-dues-paying facilities. If this product will not be used in this particular setting, please contact TRUE as this warranty is void.

Frame: The frame is warranted for defects in material and workmanship for as long as the original purchaser owns the Product. The frame is warranted for labor and freight (for parts shipped from TRUE) for three years from date of purchase. * This limited warranty on structural frame does not include paint or coatings.

Parts: The treadmill electrical parts and wear items are warranted for defects in material and workmanship for three years with three years labor warranty. The 15" touchscreen is

warranted for defects in material and workmanship for three years with three years labor warranty. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance. *TRUE Fitness shall not warrant the performance of the heart rate system on its products, as the heart rate system performance varies, based on user's physiology, age, method of use and other factors. *This limited warranty shall not apply to software version upgrades.

Cosmetics: The treadmill cosmetic parts are warranted for defects in material and workmanship for six months with labor warranty to match the parts warranty period. This limited warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance. This limited warranty will apply to but may not be limited to plastic covers, shrouds, caps, badges, overlays, paint, coatings, and grips.

iPod Connectivity: iPod Connectivity elements; headphone jack, connector and USB Port are warranted for defects in material and workmanship for 90 days with no labor warranty.

Labor: Labor is covered for a period of three years from the date of purchase unless otherwise expressed within this limited warranty as long as a TRUE authorized service provider performs the service. Service that requires over 50 miles of travel may be subject to additional charges. Reasonable and necessary maintenance guidelines can be found in the owner's manual.

Claims Procedure: TRUE Limited Warranty service may be obtained by contacting the authorized TRUE dealer from whom the Product was purchased. If the dealer from whom the Product was purchased is no longer an authorized TRUE dealer, then TRUE Limited Warranty service may be obtained by contacting TRUE directly at:
TRUE Fitness, Service Department
865 Hoff Road, St. Louis, MO 63366

1.800.883.8783 Hours of operation 8:30am - 5:00 pm CST The above Limited Warranty is subject to and will be in



Save Time and Register Online! Activate Multiple Warranties at www.truefitness.com/support

accordance with the conditions set forth below:

- 1. This Limited Warranty can be processed only if the Warranty Registration Form is completed on-line; or if the attached form is filled in, signed by the original purchaser and mailed to TRUE within 30 days of purchaser's receipt of this Product. The serial number must be intact on the Product for this Limited Warranty to be valid.
- 2. This Limited Warranty applies to the product only while the Product remains in the possession of the original purchaser and is not transferable.
- 3. This Limited Warranty becomes VALID ONLY if the Product is initially assembled/installed by a TRUE authorized dealer/technician (if anyone other than a TRUE authorized dealer/technician initially assembles and installs the Product, this Limited Warranty will be void unless the written authorization of TRUE is first obtained).
- 4. This Limited Warranty does not cover damage or equipment failure resulting from or caused by improper assembly/installation, failure to follow instructions and warnings in owner's manual, accident, misuse, abuse, unauthorized modification, or failure to provide reasonable and necessary maintenance (as referenced in the owner's manual.)
- 5. This Limited Warranty applies only to the cost of repair or replacement of parts and does not include labor (beyond the above warranty period), transportation, service, return and freight charges associated therewith expressly specified herein.
- 6. This Limited Warranty shall not apply to: Service calls to correct installation of the equipment or instruction to owners on how to use the equipment; or any labor costs incurred beyond the applicable labor warranty period.
- 7. This Limited Warranty is in lieu of all warranties, express or implied, and in lieu of all other obligations or liabilities on the part of TRUE, under no circumstances shall TRUE be liable by virtue of this Limited Warranty or otherwise from damage to any person or property whatsoever for any special, indirect, incidental, secondary or consequential losses, damages or expenses in connection with exercise products.

Any implied warranty is limited in duration to the time period covered by the Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion may not apply to you. This Limited Warranty grants you specific legal rights and you may also have other rights, which vary from state to state.


NOTE TO AUTHORIZED WARRANTY LABOR PROVIDERS:

Warranty labor reimbursement or warranty parts rights may not be transferred to, reassigned to, a third party without the express written consent of TRUE. Even jobbing out warranty labor requires TRUE's written approval.


CS550 TREADMILL SERIAL NUMBERS:

The CS550 treadmill comes with two serial numbers; one on the base and one on the display console (see diagram below). The serial number on the base is on the lower portion of the treadmill directly adjacent to the power inlet. The console serial number is located on the bottom right side of each console. Please write down your serial numbers below and keep for your records.

CONSOLE SERIAL NUMBER:

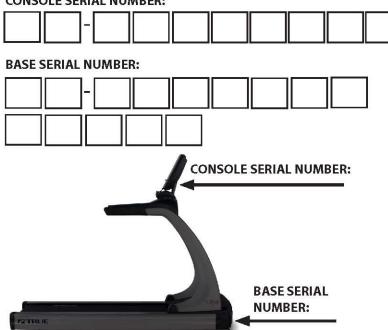

SAMPLE SERIAL NUMBER STICKER:

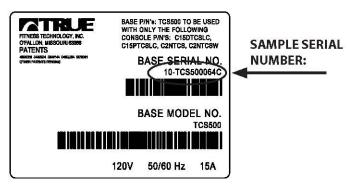



Thank you for purchasing a TRUE product. To validate the TRUE product warranty the fast and easy way, please go on-line now to truefitness.com/support and register your product. The information you provide will never be distributed to any other individuals or agencies for any purpose. If you prefer to mail your warranty card, have the owner of the product complete the information below and return it to TRUE Fitness within 30 days from the date of equipment installation.

Please Note: Failure to register this product will result in no servicing or authorization of parts to be shipped.

To mail your warranty information, please fill in the information below and mail to: Service Dept., TRUE Fitness, 865 Hoff Road, St. Louis, MO 63366 (or save postage and register online at www.truefitness.com/support)

Commercial Warranty Registration		
PLEASE PROVIDE BOTH SERIAL NUMBERS BELOW. REQUIRED FOR WARRANTY REGISTRATION: CONSOLE SERIAL NUMBER:	3. Please indicate your type of facility: a. Apartment/Condo b. Corporate Fitness Center c. Municipality d. Health Club/Gym/Spa e. Hotel/Resort f. Military Base g. Student Rec Center h. Other 4. What other types of equipment does your company currently own? a. Treadmill Brand b. Bike Brand c. Elliptical Brand	
BASE SERIAL NUMBER:	d. Free Weights/Gym Brand	
	5. How many people use your facility on a daily basis? a. <25 b. 25-75 c. 76-150 d. 150+	
Model Type: CS550 Full Commercial Treadmill	6. Do you plan to purchase more fitness equipment in the next 6-12 months?	
Date of Purchase	Yes No	
Your Company Name Contact First Name Contact Last Name Address	7. If you answered "yes" to question 6, what type do you plan to purchase? a. Treadmill b. Elliptical c. Stationary Bike d. Free Weights e. Gym f. Other	
CityStateZIP	8. Would you recommend TRUE to other club owners? Yes No	
Email Address Website	Tes NO	
PhoneFax	9. You are a valued TRUE customer and your suggestions allow us to continually improve your experience. Is there anything else you would like us to know? Please explain:	
1. Where did you first learn about TRUE? a. Dealerb. Websitec. Advertisementd. Referrale. Current Customerf. Other 2. Why did you purchase a TRUE product?a. Design/Appearanceb. Dealer Suggestionc. Price/Valued. Quality Constructione. Performancef. TRUE Reputation		

___g. Other__



DRIVE SYSTEM	Drive Motor	TRUE 5hp AC Max-Drive™		
	Incline Motor	Compression Elevation Motor with 1000 lbs of Thrust		
	Speed Sensor	Optical		
	Power Source	120 Volt/20 Amp Dedicated (NEMA 5-20 Receptacle) Cord Length 12' (3.7m) - 220v Option Available		
EXERCISE SURFACE	Deck	Double Sided Thermally Fused Laminated 1" Medium Density Fiberboard		
	Reversible Deck	YES		
	Belt	Siegling Multi-Ply Belt with PVC Coating		
	Rollers	3" Diameter Crowned Rollers		
	Impact System	TRUE Soft System™ (neoprene shock absorbers)		
	Lubrication	TRUE Proprietary Lubricant "Silax"®		
FRAME	Frame	11-Gauge Heavy-Duty Welded Steel		
	Pedestals	Hydroformed Steel		
	Handrails	Molded Urethane, Moisture Resistant Flared Handrails		
	Medical Handrails	YES		
CONSOLE	Display Type	15" Touch Screen: CS550-T15T	11" Custom LCD: CS550-T11	
	iPod" Compatibility	Advanced	Basic	
	Entertainment Capabilities	Integrated 15"LCDwithTouchScreentechnologyandbuilt-inTV, integrated iPod® connectivity with music and video featuring onscreennavigation,ScenicLandscapePerspectives,USBconnectivity, NTSC/ATSC/QAM digital tuner or PAL/SECAM tuner	Optionalintegratedwirelessentertainmentcontrol,integrate iPod® connector	
	Communications	Full CSAFE Compatibility - Fitlinxx*		
	Кеу Туре	Membrane - Center Pod Only	Membrane	
	Command Keys	1 Touch Quick Speed, HRC Cruise Control®	1 Touch Quick Speed, HRC Cruise Control®	
	Data Readouts	Speed, Incline, Elapsed Time, Time Remaining, Distance, Distance Remaining, Pace, Heart Rate, Target Heart Rate, METs, Calories, Calories/Hour, Segment Time Remaining	Speed, Incline, Elapsed Time, Time Remaining, Distance, Pac Heart Rate, Target Heart Rate, % of Maximum Heart Rate, MET Calories, Level	
	Diagnostics	YES		
HEART RATE	ContactHeartRateMonitoring	YES		
	WirelessHeartRateMonitoring	Wireless - Polar® Equipped		
	HRC (Heart Rate Control)* Workouts	YES - 8	YES - 7	
	HRC Cruise Control	YES		
PROGRAMMING	Workouts	21 Preset, 4 Custom*, 5 Saved Workouts	8 Preset, 3 Custom	
	Fitness Tests	Gerkin Protocol and 4-Military	Gerkin Protocol and 4-Military	
OTHER FEATURES	Accessories	Reading Rack, 2 Water Bottle Holders, Integrated iPod®/Accessory Tray		
	Safety	Safety Clip Equipped, Extended Handrails, Large Straddle Covers, User Present Detection™		
	Balance Bar Control Pad	YES		
	Personal Cooling System	YES		
PHYSICALSPECIFICATIONS	Footprint	82"L x 33"W (208 cm x 84 cm)		
	Running Surface	60"L x 22"W (152 cm x 56 cm)		
	MachineWeight/ShippingWeight	433 lbs (197 kg) / 524 lbs (238 kg)	429 lbs (195 kg) / 517 lbs (235 kg)	
	Maximum User Weight	500 lbs (227 kg)		
	Decline Option	YES		
	Incline Range	0 to 15% standard; with decline -3 to 15%		
	Speed Range	0.5 -12 mph (0-19 kph)		
	Step-Up Height	7" (18 cm); with decline 9" (23 cm)		
	Portability	Front Transport Wheels		
	Regulatory Approvals	UL, CSA, FCC (CE for 220v)		
WARRANTY	Warranty	Frame Life, Notor 5 Yrs, Parts 3 Yrs, Labor 3 Yr, Touch Screen Console Parts 3 Yrs, Labor 3 Yrs, Headphone jack, iPod® Connector, and USB Port – 90 days parts, no labor	FrameLife, Motor 5 Yrs, Parts 3 Yrs, Labor 3 Yr, Headphone jacli Pod® Connector, and USB Port – 90 days parts, no labor	





What Is TRUE World?

TRUE World is the way in which we hope to further engage our TRUE community. Whether you are a TRUE dealer, an owner of a piece of TRUE cardio equipment, or simply a fitness enthusiast, we hope you become part of TRUE World.

With the new Universal Console on TRUE cardio equipment, TRUE World is a place where YOU select the machine with the display YOU choose, tailoring each machine to fit your needs and budget. The new console choices range from classic to trendsetting.

Only in the TRUE WORLD can you find this new console design that not only provides a sleek, cohesive look, but also provides versatile display options for EVERY piece of equipment.

But that's just the beginning. Share what your TRUE World is online with us -- through our website www. truefitness.com/world or through our social media sites on Facebook and Twitter.

TRUE World is a community of users. Through that community of users we hope to continue the tradition of excellence that is TRUE. TRUE World is a place where tradition meets technology; where 29 years of continuous innovation and improvement produces ONE THING - the world's finest cardio equipment. Only TRUE users know - these rugged yet elegant machines are simply the smoothest, quietest, and most durable on the market.

TRUE WORLD is helping us prepare our premier cardio machines to meet the future.

This truly is just the beginning...



www.facebook.com/TRUE-fitness



www.twitter.com/truefitnesstech



CONTACT INFORMATION

TRUE FITNESS SERVICE DEPARTMENT 865 HOFF ROAD ST. LOUIS, MO 63366 1.800.883.8783 HOURS OF OPERATION: 8:30 A.M. - 5:00 P.M. CST

TRUE FITNESS HOME OFFICE 865 HOFF ROAD ST. LOUIS, MO 63366 1.800.426.6570 1.636.272.7100